


## The Guide of Ultra and Ultra Wide Firmware Update

### Before Update


It is unnecessary to update the firmware of your SCSIIDE bridge unless you want to debug or exclude bugs beforehand. If the bridge operates well in your current system configuration, it is not recommended to update the firmware. Anyway you have to take the risk of firmware update.

### Steps of Update


0. Download the latest version of firmware and update utility from ACARD Web site, and decompress them.
1. Double click “Setup” to install the update utility.

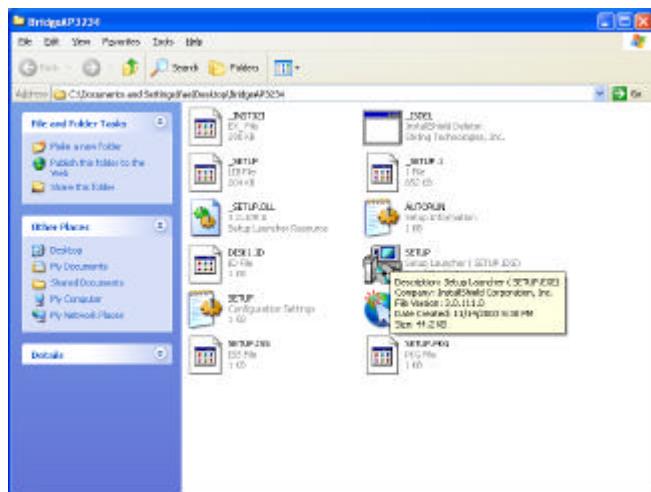


2. Follow the InstallShield Wizard to complete the utility installation.

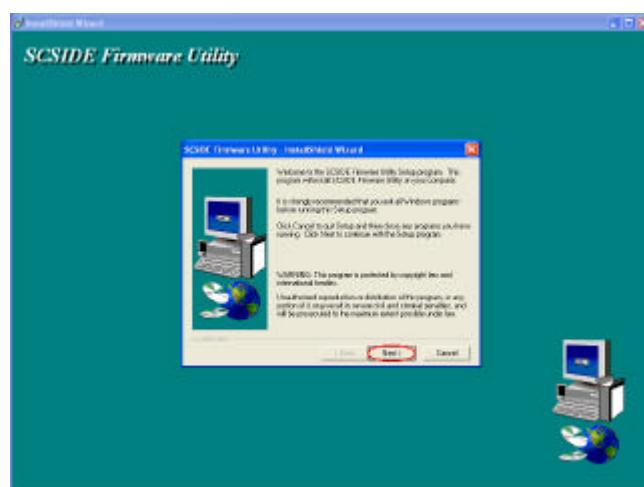


3. Locate the SCSIDE firmware utility and execute it.

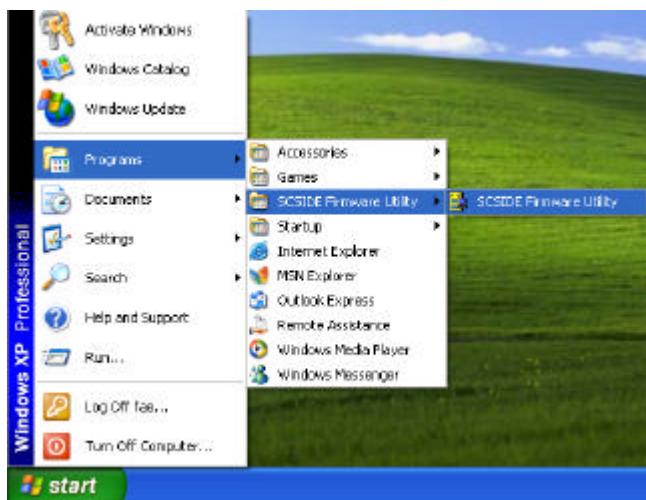


4. Select the host SCSI card to which your SCSIDE bridge is connected.

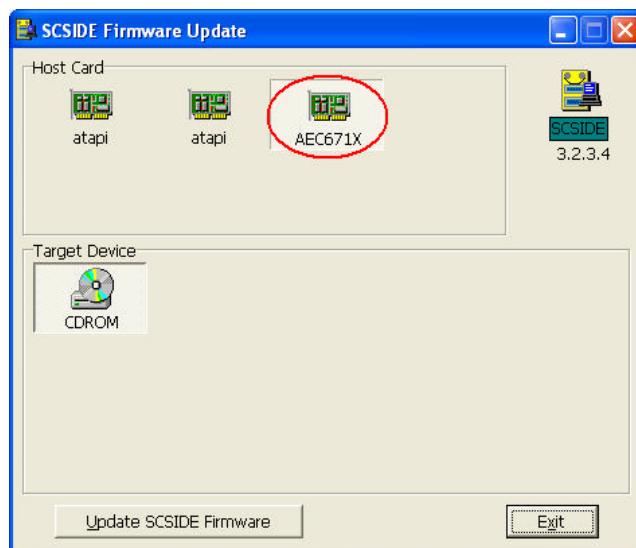


5. Move the cursor to the top of the device icon to see the firmware version, etc.

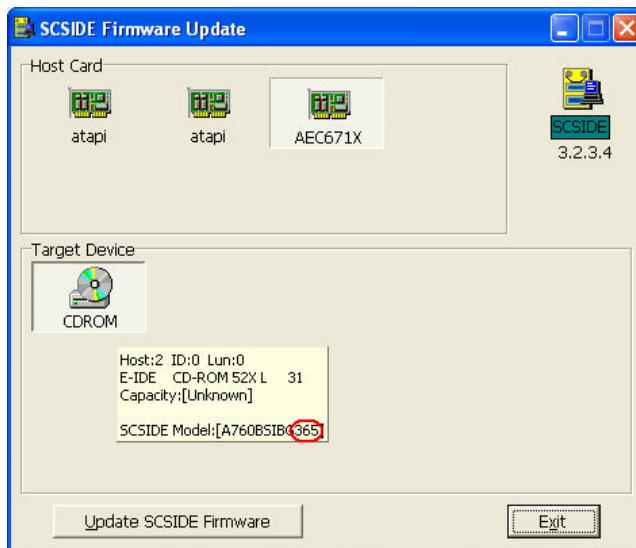


6. Click “Update SCSIDE firmware”, and select the newest version of firmware that you downloaded.

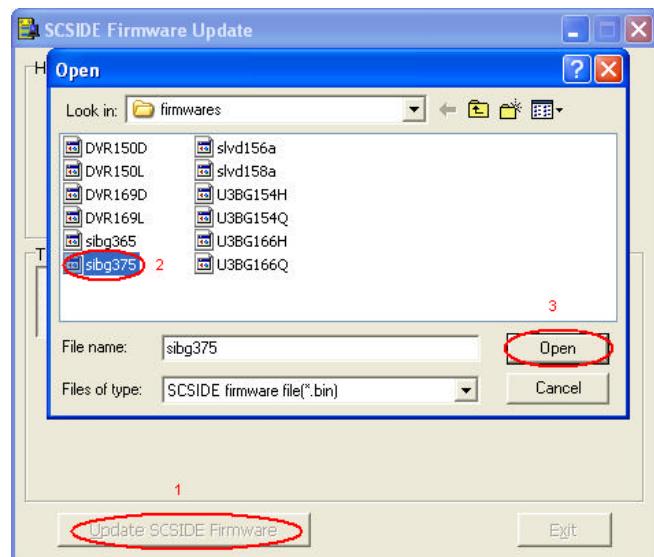


7. Click “Yes” to confirm, and start to update.

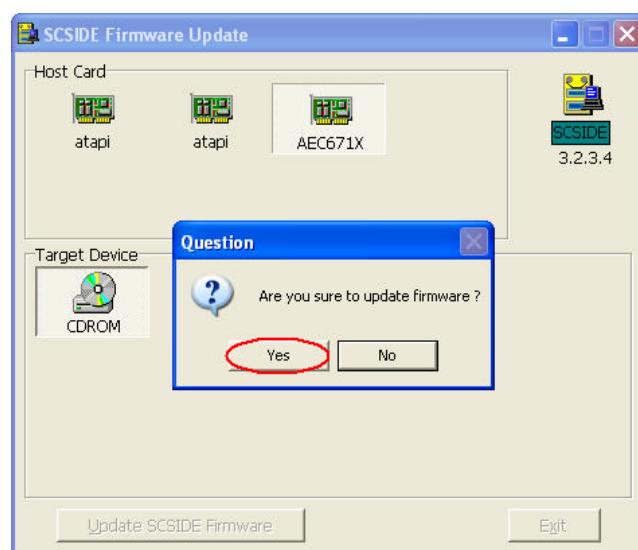

8. Wait a moment till the dialog box of successful update appears. Then, the utility will remind you to reboot the system before exit.

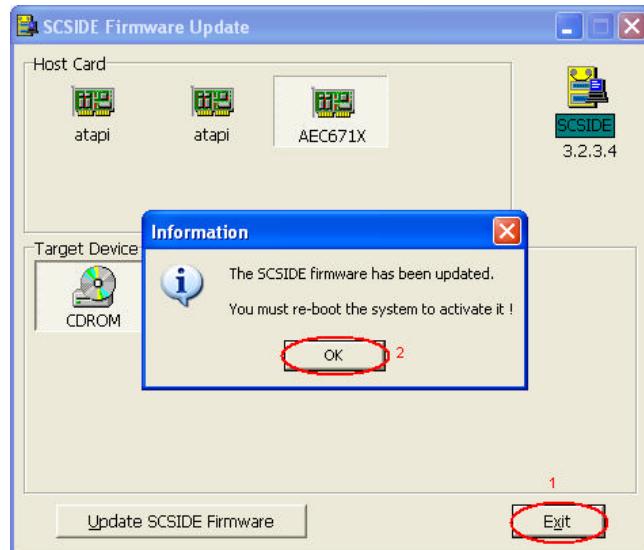

9. Execute the utility again to double check the new firmware.

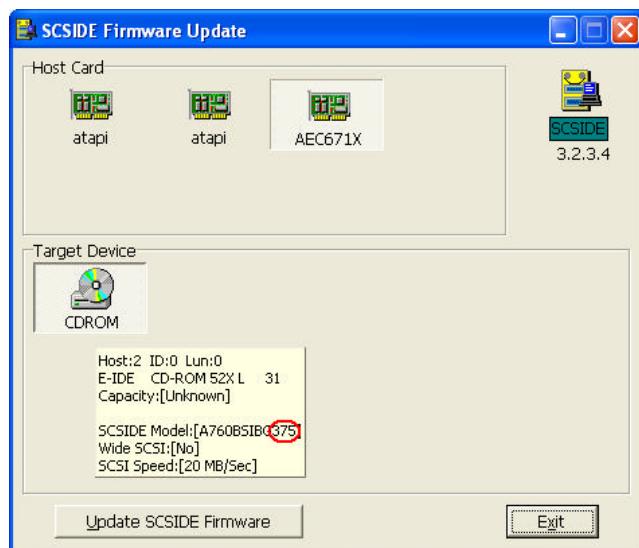

NOTICE: Do not turn off or reboot the system before the update is finished.  
Otherwise you have to ship back your product for repair.